


On the Touch unit, go to **Settings**, then **About**
Determine if your Firmware starts with 1. or 2.

Download the matching
Firmware that starts with 1. or 2.

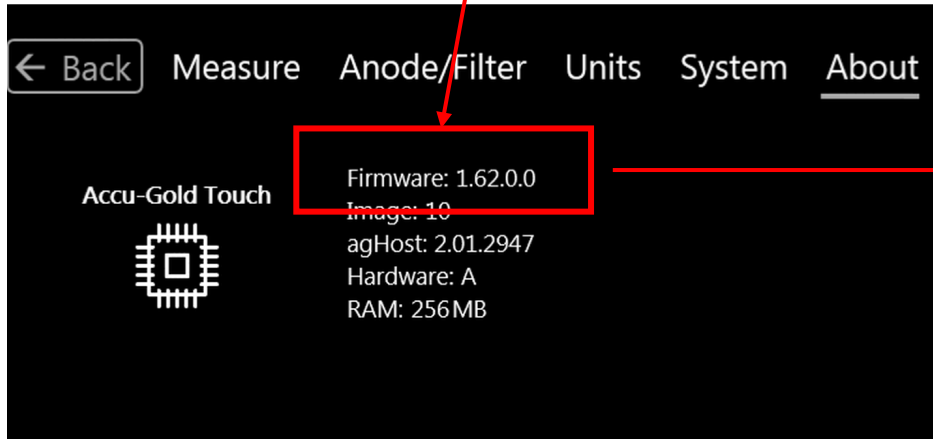


Accu-Gold Touch Firmware

- [AGT Update V1.62.0 \(Flash Drive setup\)](#)
- [AGT Update V1.62.0 \(Alt - Zip download\)](#)
- [Firmware upgrade instructions](#)

The Pro version for this unit requires a separate WiFi Firmware update:
(note that it also starts with 1.)

Accu-Gold Touch WiFi Firmware

- [AGTWiFi Update V1.27.0 \(Flash Drive setup\)](#)
- [AGTWiFi Update V1.27.0 \(Alt - Zip download\)](#)
- [Firmware upgrade instructions](#)

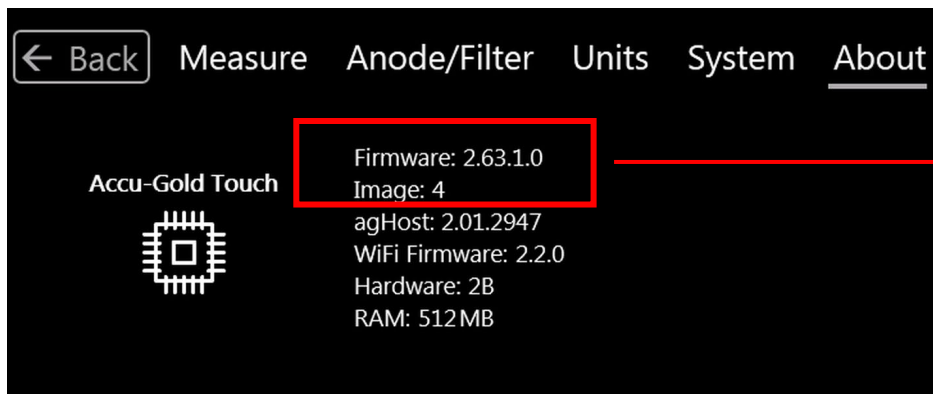

Accu-Gold Touch Pro Firmware

- [Accu-Gold Touch Pro V2.66.0](#)
- [Firmware upgrade instructions](#)

The Pro version for this unit does not
require a separate WiFi Firmware update.